



XPS Sample Loading Using Bar Holder

Samples must be placed within the outer set of screw holes

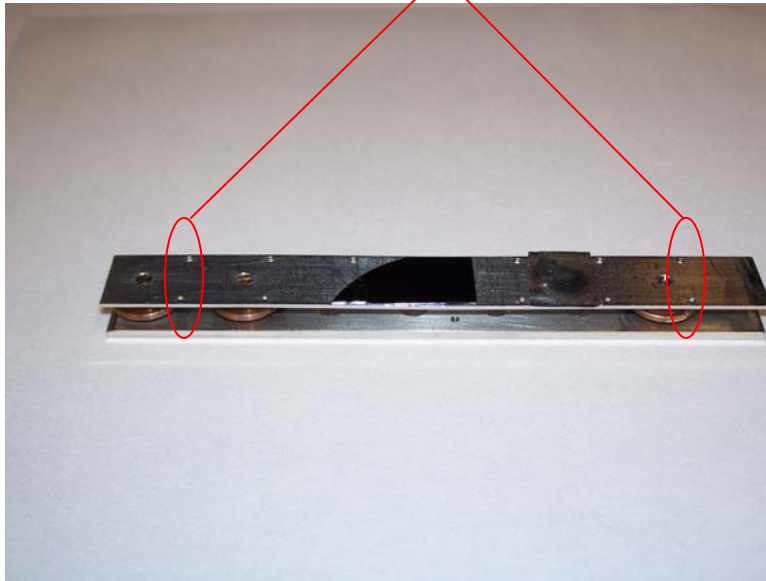

The bar holder must be loaded according to the orientation shown below. The end with one bearing connects to the transfer arm, and the end with two bearings will connect with the stage inside the chamber.

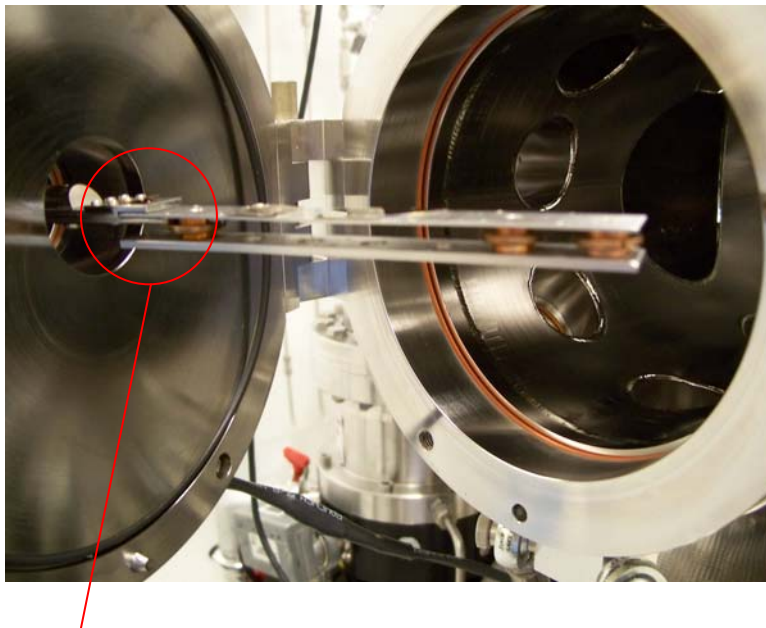

The bar holder end with one bearing connects to the transfer arm. The top of the bar holder slides into the groove at the end of the transfer arm.